




Base motorhome –


Swift Escape 686



Original layout

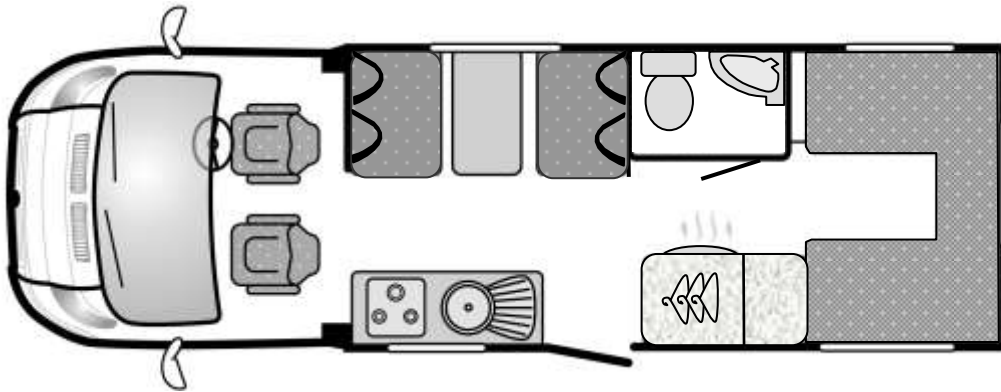

'Adapted' Layout

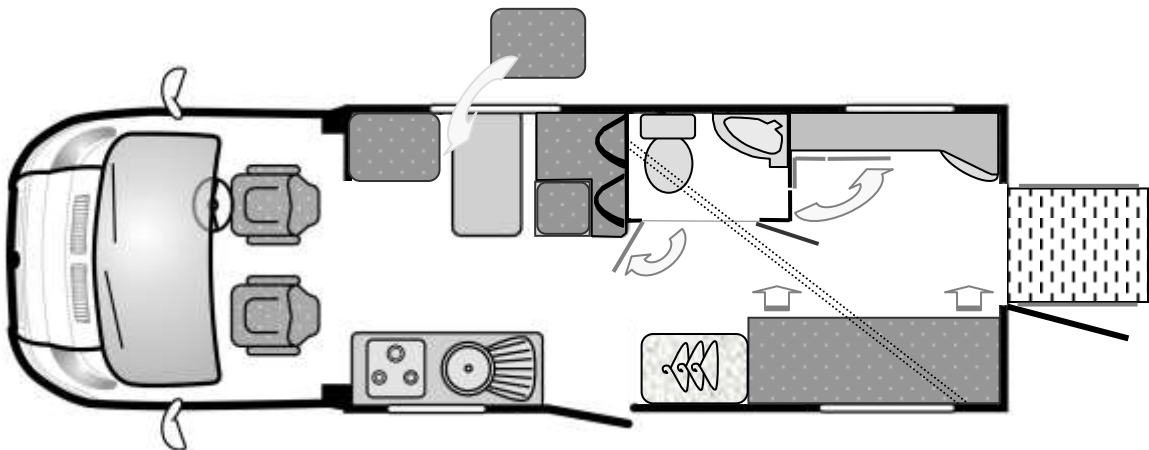

Adaptation Specification

No of berths = 4

Controls

The driving controls will be standard

Access

Wheelchair access is achieved through a rear wide access door and under slung lift allowing access when parked in car parks etc.



Layout

- The offside bench seat is removed to allow free wheelchair access via the rear door and provides room to turn the wheelchair. This is replaced by a worktop complete with sockets and an external wet locker
- The bathroom has dual access, general access is gained via a standard door, disabled access is gained by folding back the false hinged wall opposite the toilet and also the corner wall section and door combined, and this therefore opens up the entire front and section of the side of the bathroom. Once inside a shower curtain can be pulled around if space or assistance is required however for full privacy both the curtain and the partitions can be closed.
- The wardrobe is modified to give corridor width for wheelchair access and the heater/fire is repositioned on the offside rear under the new worktop
- The rear facing offside seat is modified to a single seat as shown to give access to the passenger seat, to form a bench seat when combined with the 'infill' upholstery which replaces the centre table, and to be used as a dinette seat for dining
- The bed box of the front facing offside seat is modified to have a removable section to give wheelchair access to the dining table and front driving position. This seat section can be replaced to allow seatbelt use when travelling
- A hoist rail runs from washroom across both the gangway for wheelchair and the near side bed for transfer to and from all three

Evening

- A single near side rear fixed bed provides sleeping for one, note. This can be easily made into a pull out double if required.
- 1 double bed remains over cab, whilst the front seats still convert into either a large single or small double

Quality

All the adaptations will be completed using the original manufacturers materials and techniques designed to indistinguishable from the original build. All regulatory requirements will be maintained.

Methodology

The furniture to be modified will be removed and the wide door aperture created at the earliest opportunity. You will then be invited to a design review in the caravan when we advise you to bring the wheelchair and any other equipment with you, allowing the final dimensions of the new furniture to set to best meet your specific needs and wishes.